


MICRO CENTER

computers & electronics

DUAL FIGHT STICK STAND

*CONTROL PANEL
AND T-MOLDING
SOLD SEPARATELY


**YOU WILL NEED
A MINIMUM OF 25'
OF T-MOLDING FOR
THIS STAND. MICRO
CENTER SELLS IN
LENGTHS OF 20' SO
YOU WILL NEED TO
BUY 2 PACKAGES.

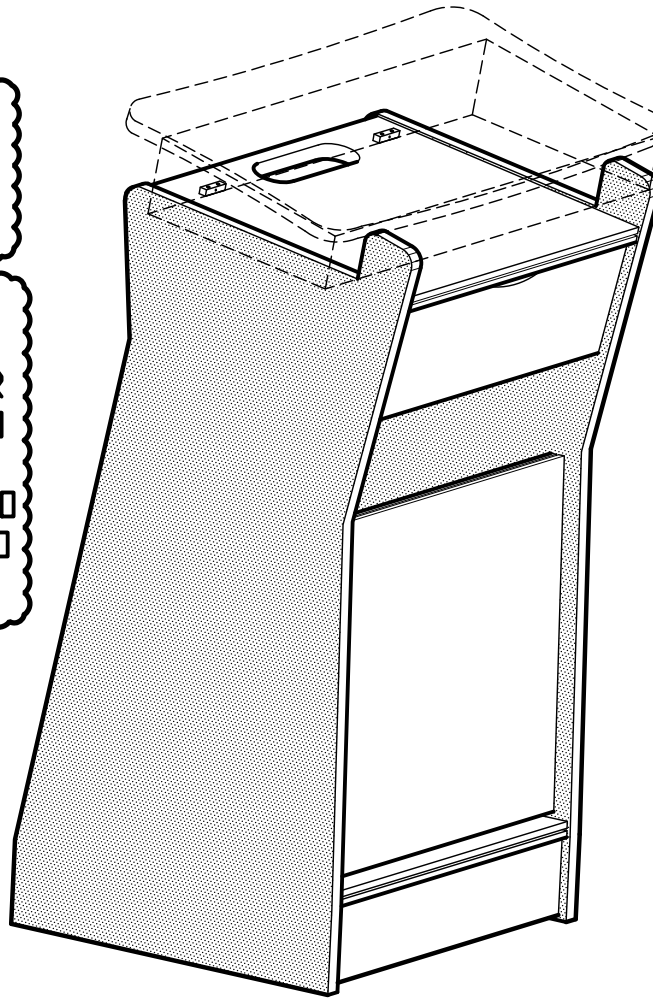


TOOLS REQUIRED FOR ASSEMBLY




FOR CABINET
ASSEMBLY

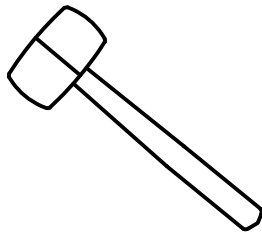

FOR T-MOLD
INSTALLATION

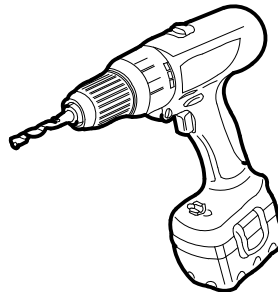

FOR ATTACHMENT
TO CONSOLE


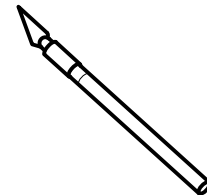


FOR T-MOLD
INSTALLATION


MICRO CENTER
computers & electronics



4119 LEAP ROAD, HILLIARD, OH 43026
AUGUST 02, 2020

PARTS INCLUDED

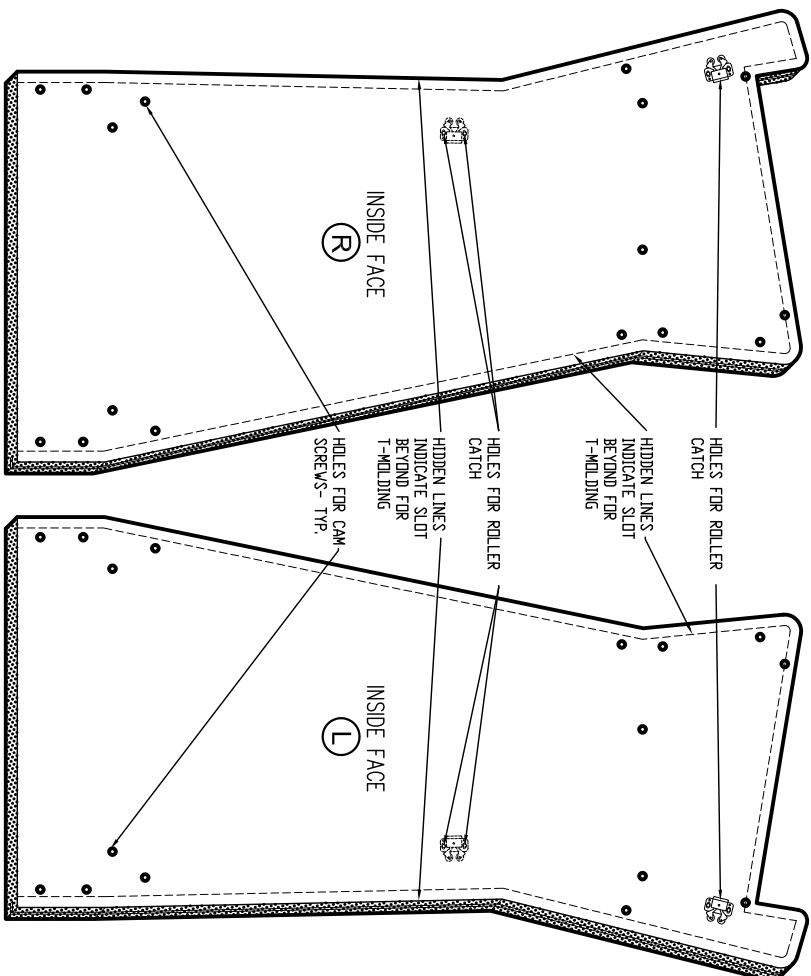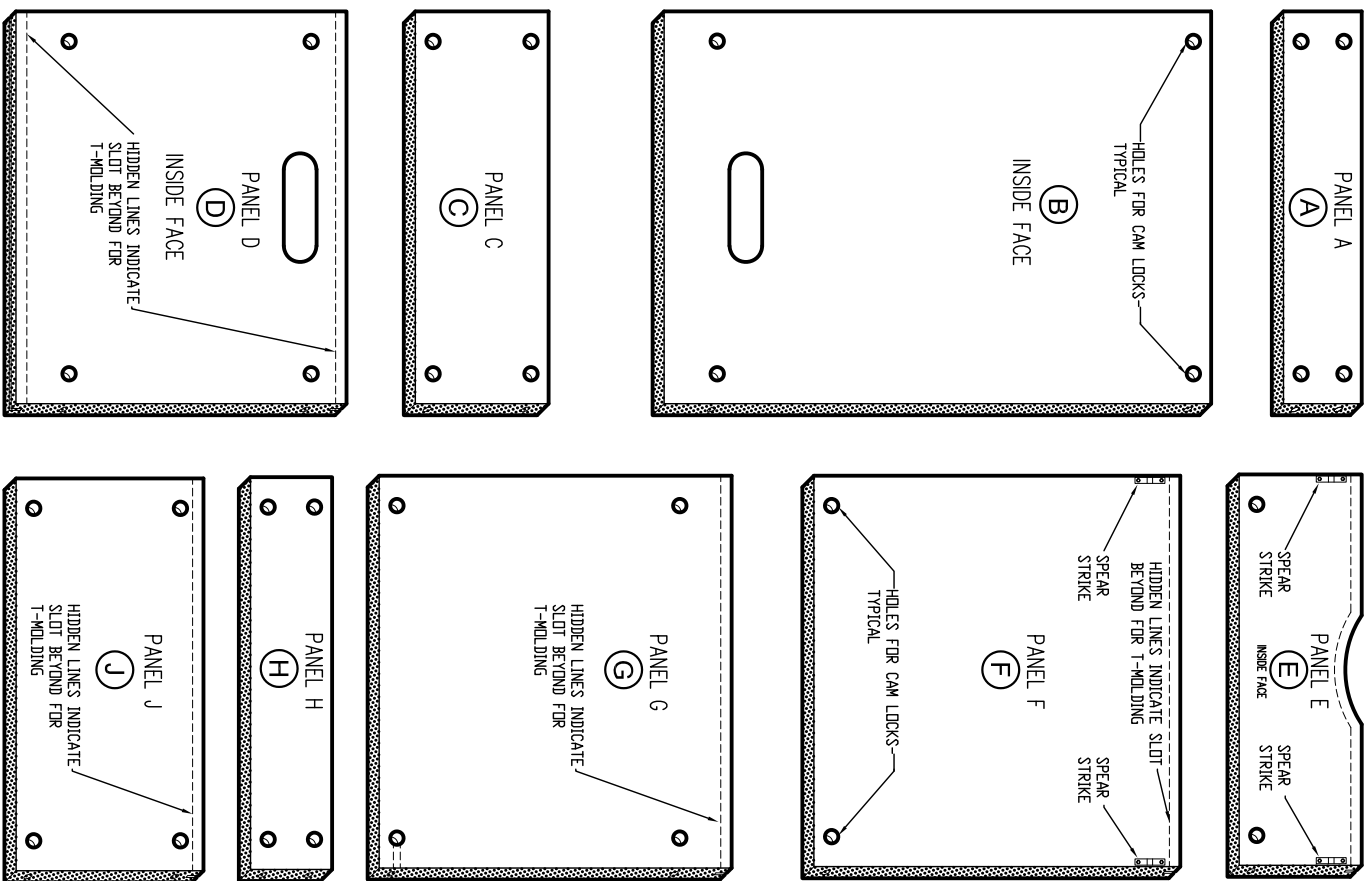


HARDWARE

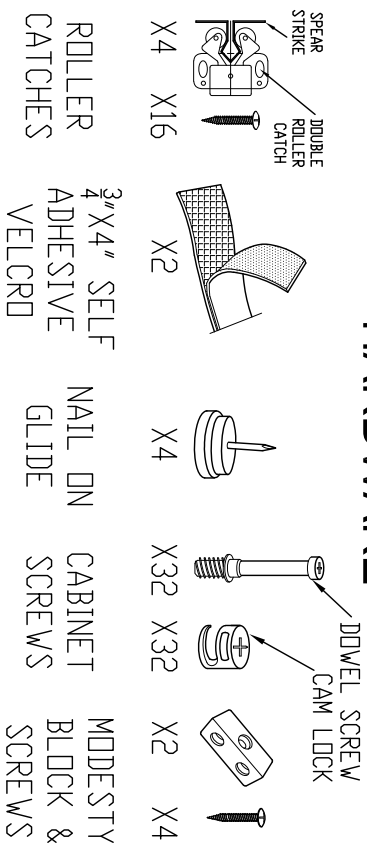

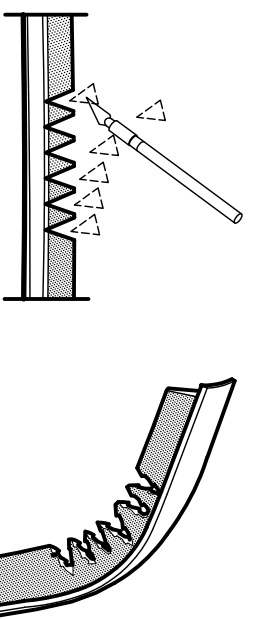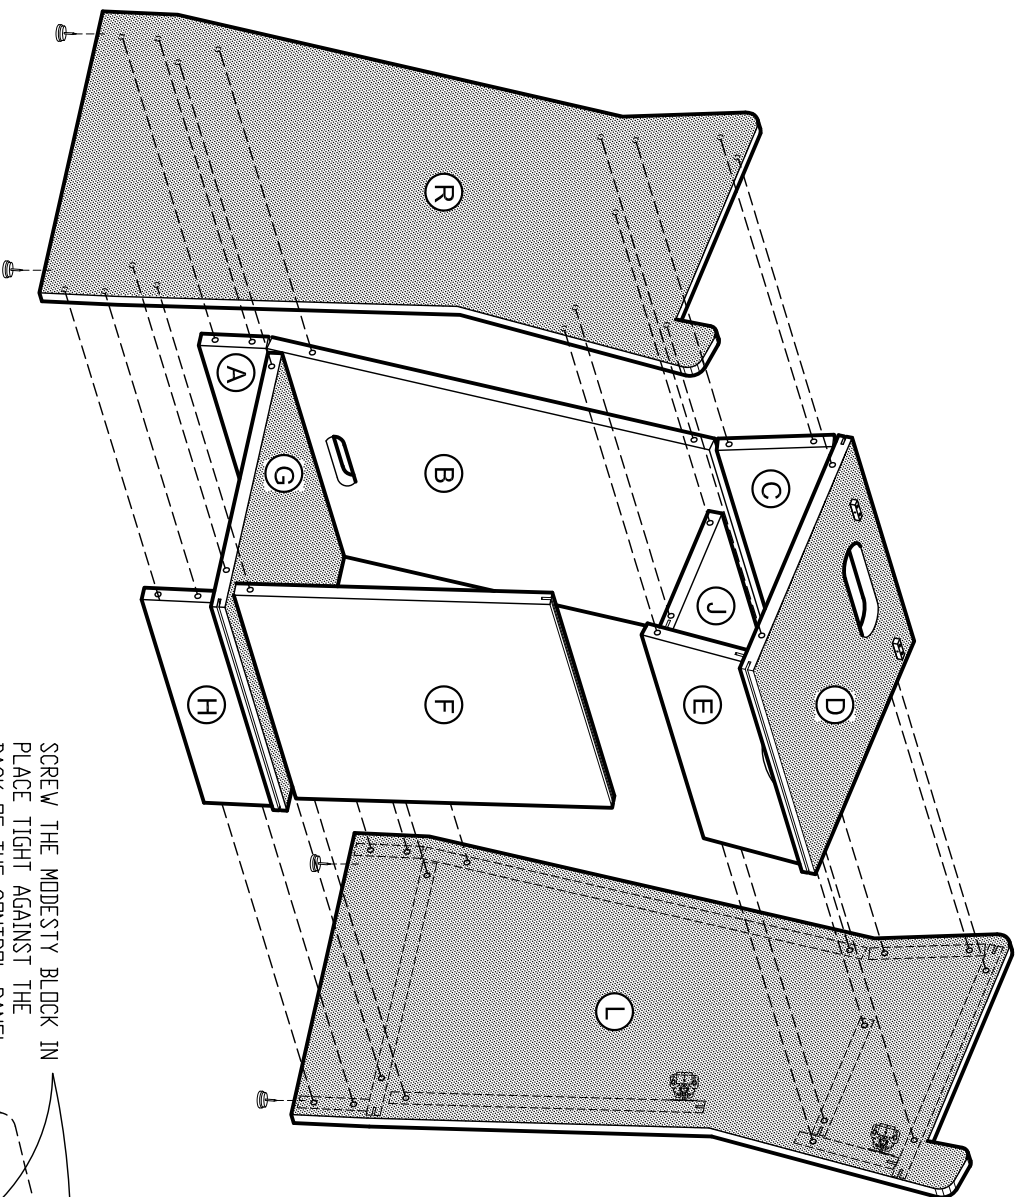

① KERF T-MOLD AROUND CURVED EDGES

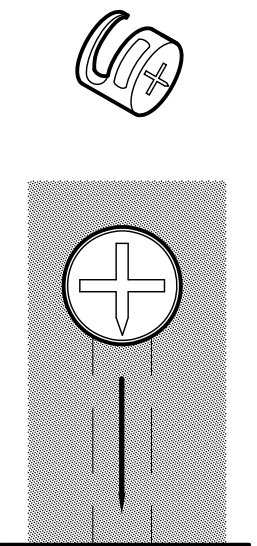


② CAM LOCK ARROW TO POINT POINTED TO EDGE

SCREW THE MODESTY BLOCK IN
PLACE TIGHT AGAINST THE
BACK OF THE CONTROL PANEL
*YOU MAY NEED TO DRILL
PILOT HOLES

LOCATE THE CONTROL PANEL
TIGHT TO FRONT EDGE OF
STAND

ATTACH 4" STRIP OF VELCRO
ON EACH SIDE

REMOVE TAPE FROM EXPOSED
SIDE OF VELCRO AND LOCATE
CONTROL PANEL ON TOP OF
TAPE/STAND

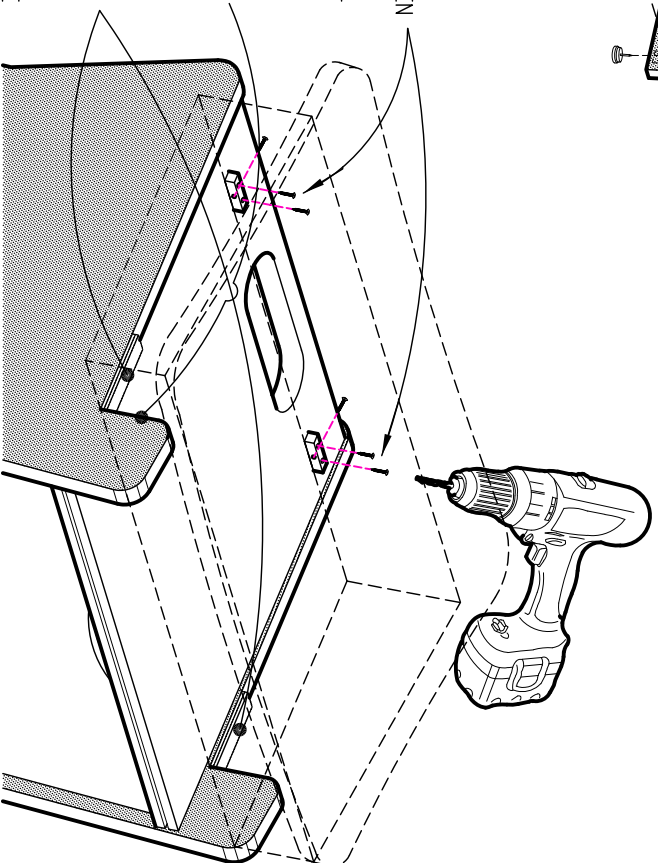

③ INSTALLING VELCRO AND MODESTY BLOCKS

MICRO GAMER

Computers & electronics

4119 LEAF ROAD, HILLIARD, OH 43026

AUGUST 2, 2020

1. CAREFULLY REMOVE THE CABINET PARTS FROM THE BOX AND INSPECT FOR VISIBLE SIGNS OF DAMAGE
*IF YOUR CABINET IS DAMAGED OR IS MISSING PARTS, PLEASE DOCUMENT AND CONTACT STORE WHERE PURCHASED
 2. INSTALL GRAPHIC AND THEN THE T-MOLDING. (T MOLDING AND GRAPHICS ARE NOT INCLUDED WITH KIT AND CAN BE INSTALLED AFTER ASSEMBLY IF REQUIRED)
HINT: KERF THE SPLINE OF THE T MOLDING WHEN GOING AROUND CURVED EDGES FOR A SMOOTH INSTALL- SEE DETAIL 1
 3. INSTALL THE ROLLER CATCHES ON LEFT AND RIGHT PANELS AND THE SPEAR STRIKES ON PANELS E AND F
HINT: DO NOT TIGHTEN SCREWS DOWN ALL OF THE WAY TO ALLOW FOR LATER ADJUSTMENTS
 4. SCREW IN ALL OF THE DOWEL SCREWS INTO THE LEFT AND RIGHT SIDE PANELS
 5. INSERT ALL OF THE CAM LOCKS INTO PANELS A THRU J; THE ARROW SHOULD POINT TOWARD THE EDGE- SEE DETAIL 2
HINT: IF THE CAM LOCKS HAVE A TENDENCY TO FALL OUT THEN TAPE THEM IN PLACE WITH CLEAR SCOTCH TAPE. (YOU CAN TIGHTEN THEM BY PUNCHING YOUR SCREWDRIVER THROUGH THE TAPE)
 7. STARTING WITH ONE OF THE SIDE PANELS, PLACE THE ENDS OF THE ASSOCIATED PANELS ONTO THE DOWEL SCREWS AND TIGHTEN THE CAM LOCKS IN PLACE.
 8. PLACE REMAINING SIDE PANEL ON TOP OF ASSEMBLED SIDE AND GUIDE THE DOWEL SCREWS INTO THEIR SLOTS UNTIL SITTING FLUSH. TIGHTEN ALL OF THE CAM LOCKS
HINT: ROTATE PANELS F AND E TO THEIR OPEN POSITION FOR AN EASIER INSTALL OF LAST SIDE PANEL
 9. YOU CAN NOW SET THE STAND UPRIGHT
- INSTALL CONTROL PANEL (PANEL NOT INCLUDED)**
10. ATTACH THE VELCRO TO THE TOP OF THE STAND AS INDICATED
HINT: DRY-FIT THE CONTROL PANEL ON TOP OF VELCRO TO ENSURE CENTERED LOCATION BEFORE REMOVING TAPE FROM EXPOSED SIDE OF VELCRO. PLACE THE CONTROL PANEL TIGHT TO FRONT EDGE.
 11. ATTACH THE MODESTY BLOCKS TO SECURE THE CONTROL PANEL. REFER TO DIAGRAM 3
- HINT: ATTACH THE MODESTY BLOCKS TO THE BACK OF THE CONTROL PANEL. SET THE CONTROL PANEL IN PLACE ON THE STAND AND THEN DRILL/SCREW THE MODESTY BLOCK TO THE TOP OF THE STAND.

