

TO ENSURE A SUCCESSFUL ASSEMBLY,
INSPECT CABINET PARTS PRIOR TO
ASSEMBLING

1. CAREFULLY REMOVE THE ARCADE
CABINET PARTS FROM BOX AND
INSPECT FOR VISIBLE SIGNS OF
DAMAGE
2. CHECK TO INSURE ALL PARTS ARE
INCLUDED

IF YOUR GAME CABINET IS DAMAGED OR
IS MISSING PARTS, PLEASE DOCUMENT
AND CONTACT STORE WHERE
PURCHASED










MICRO CENTER
computers & electronics

ARCADE CABINET





THREE QUARTER SIZE



ASSEMBLY INSTRUCTIONS

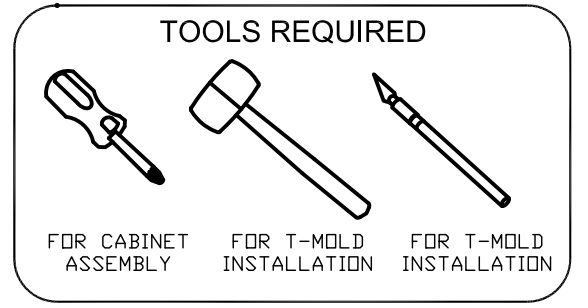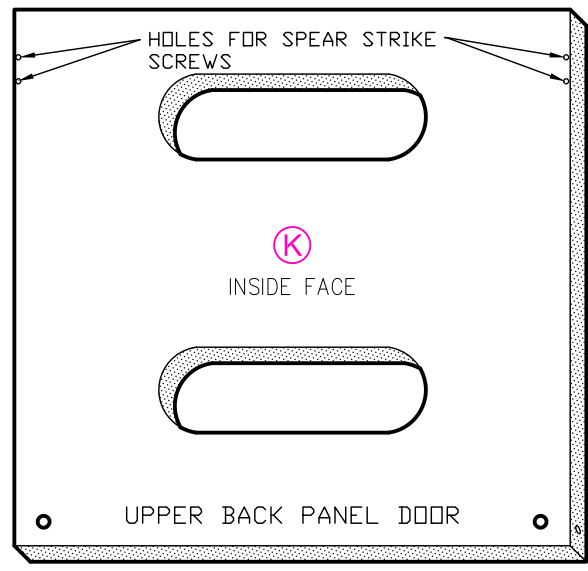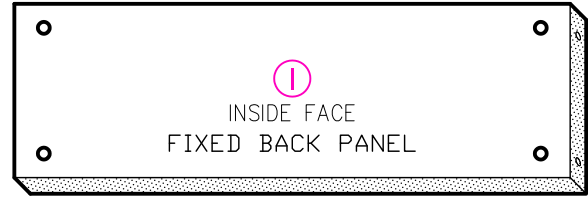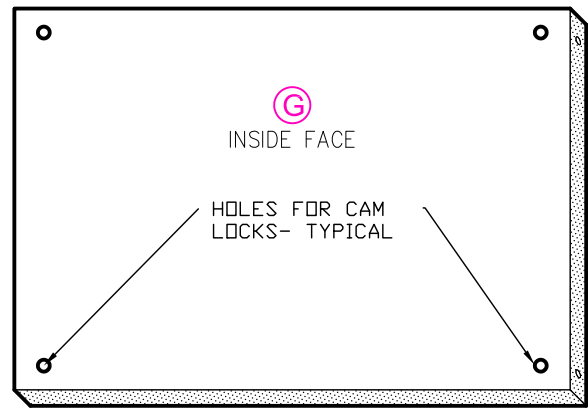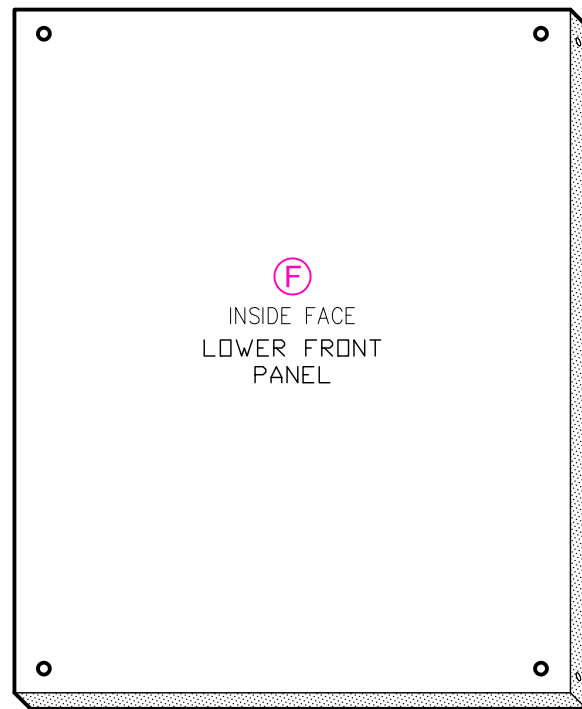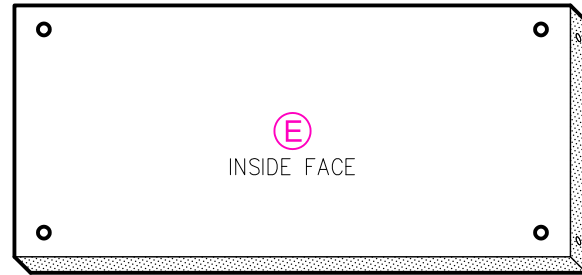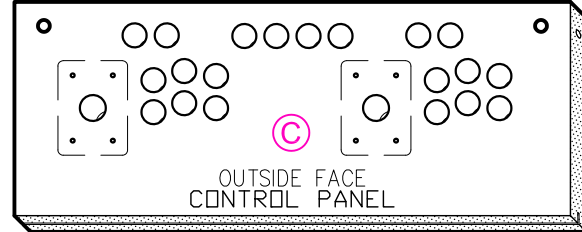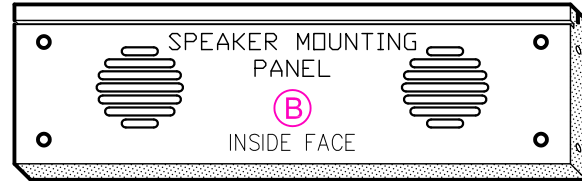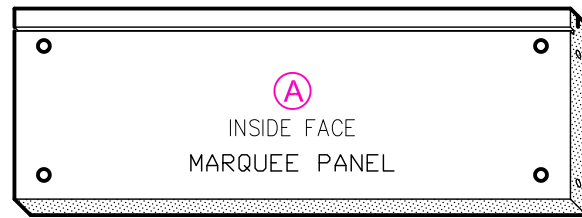



PARTS LIST

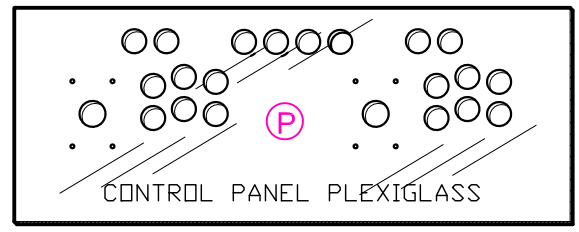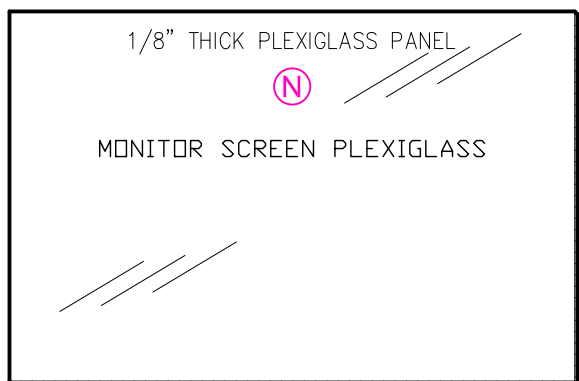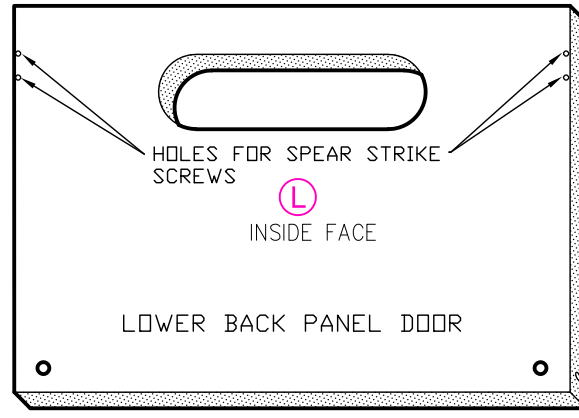

TO ENSURE A SUCCESSFUL ASSEMBLY,
CABINET PARTS TO BE INSPECTED PRIOR
TO ASSEMBLY

1. CAREFULLY REMOVE THE ARCADE
CABINET PARTS FROM BOX AND
INSPECT FOR VISIBLE SIGNS OF
DAMAGE
2. CHECK TO INSURE ALL PARTS ARE
INCLUDED

IF YOUR GAME CABINET IS DAMAGED OR
IS MISSING PARTS, PLEASE DOCUMENT
AND CONTACT STORE WHERE
PURCHASED

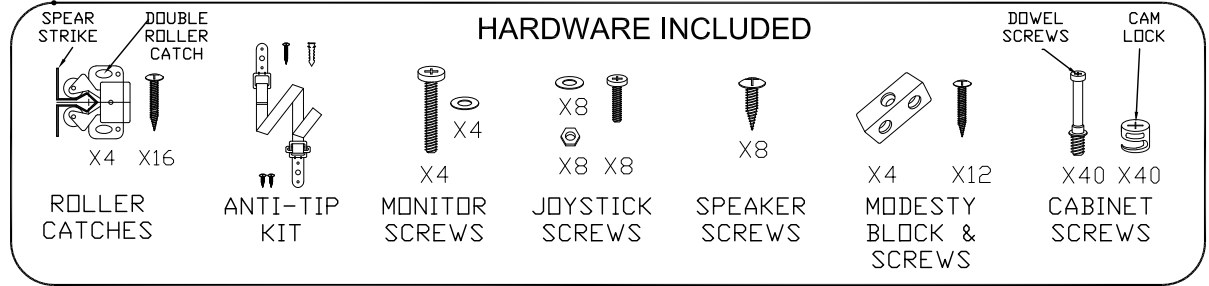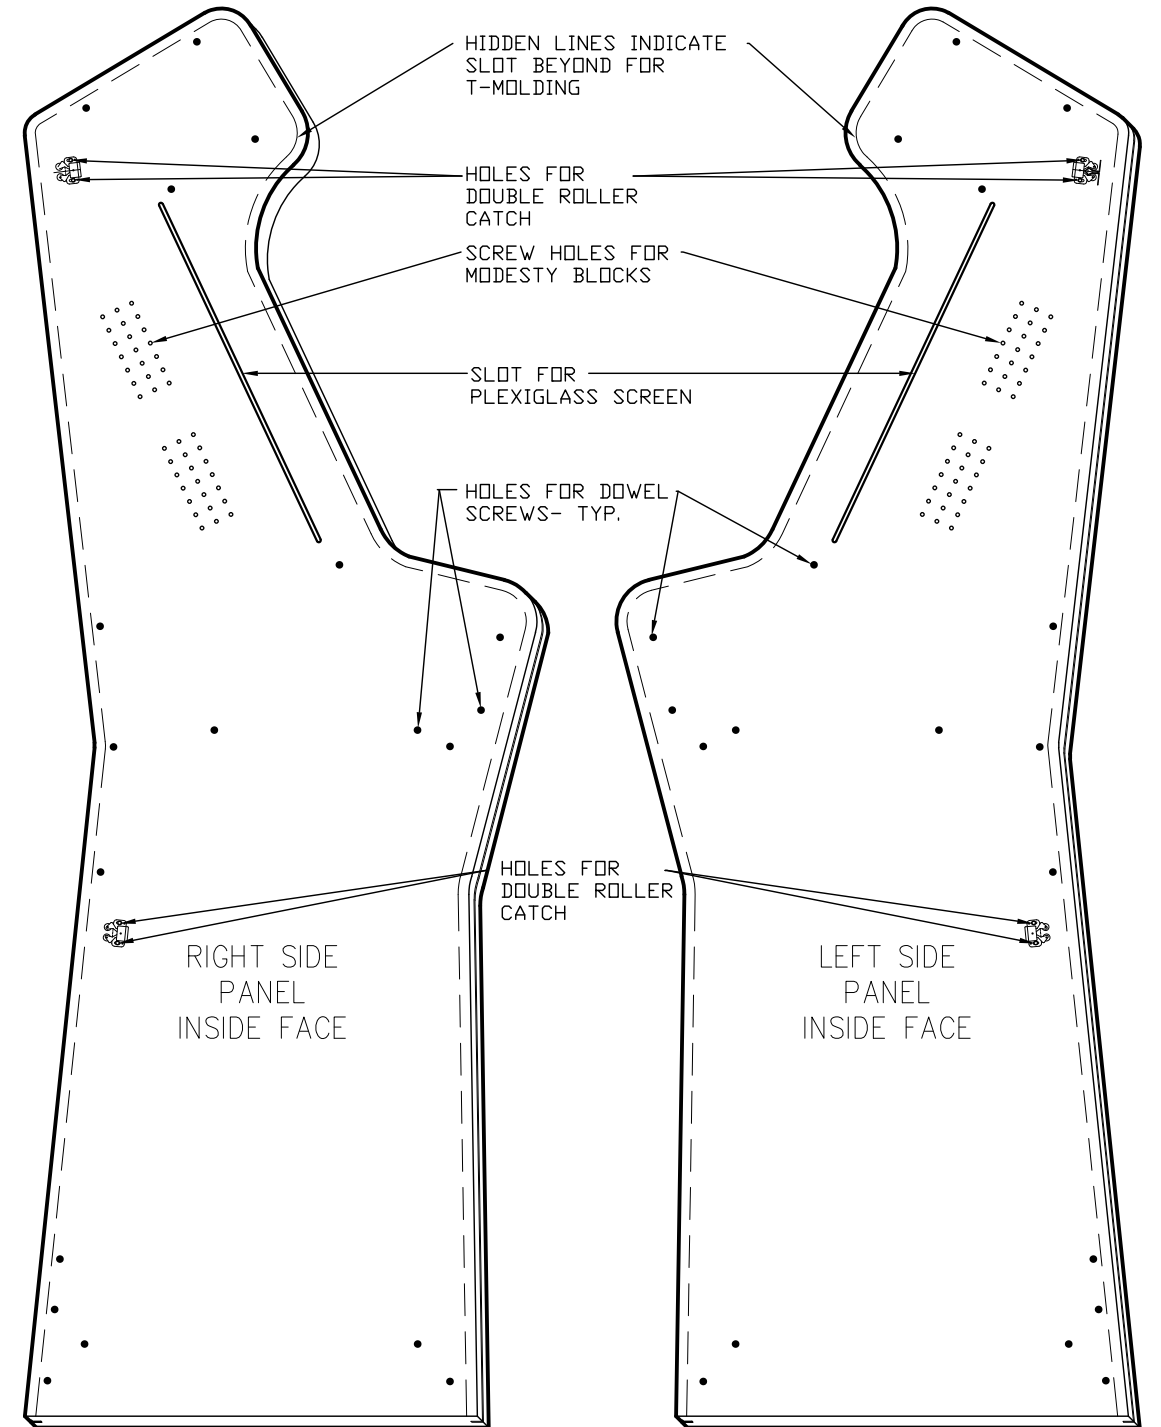

DIRECTIONS

1. CAREFULLY REMOVE THE CABINET PARTS FROM BOX AND INSPECT FOR VISIBLE SIGNS OF DAMAGE AND MISSING PARTS

**IF YOUR CABINET IS DAMAGED OR IS MISSING PARTS, PLEASE DOCUMENT AND CONTACT STORE WHERE PURCHASED*

2. IF YOU HAVE THE GRAPHIC INSTALL IT NOW AND THEN FOLLOW WITH THE INSTALLATION OF THE T-MOLDING USING A RUBBER MALLET. (T-MOLDING AND GRAPHICS NOT INCLUDED WITH KIT AND CAN BE INSTALLED AFTER ASSEMBLY IF REQUIRED)

HINT: KERF THE SPLINE OF THE T MOLDING WHEN GOING AROUND CURVED EDGES FOR A SMOOTH INSTALL- SEE DETAIL 1

3. LAY THE LEFT AND RIGHT SIDE PANELS DOWN WITH HOLES FACING UP; SCREW IN ALL OF THE DOWEL SCREWS AND ALSO INSTALL ROLLER CATCHES. INSTALL SPEAR STRIKES ON PANELS L AND K.

HINT: DO NOT TIGHTEN THE CATCH/STRIKE SCREWS DOWN ALL OF THE WAY TO ALLOW FOR LATER ADJUSTMENTS

4. INSTALL SPEAKERS TO INSIDE FACE OF PANEL B; CENTER SPEAKERS OVER SLOTS. (SPEAKERS NOT INCLUDED WITH KIT)

5. INSERT ALL OF THE CAM LOCKS INTO THE PANELS; THE ARROW SHOULD POINT TOWARD THE EDGE- SEE DETAIL 2

HINT: IF THE CAM LOCKS HAVE A TENDENCY TO FALL OUT THEN TAPE THEM IN PLACE WITH CLEAR SCOTCH TAPE. (YOU CAN TIGHTEN THEM BY PUNCHING YOUR SCREWDRIVER THROUGH THE TAPE)

6. STARTING WITH ONE OF THE SIDE PANELS, PLACE THE ENDS OF THE ASSOCIATED PANELS ONTO THE DOWEL SCREWS AND TIGHTEN THE CAM LOCKS IN PLACE.

7. ONCE ALL OF THE PANELS HAVE BEEN TIGHTENED IN PLACE, YOU CAN THEN SLIDE THE PLEXIGLAS PANELS INTO THEIR SLOTS. REMAINING SIDE PANEL ON TOP OF ASSEMBLED SIDE. TIGHTEN ALL OF THE CAM LOCKS

8. PLACE THE REMAINING SIDE PANEL ON TOP OF ASSEMBLED SIDE AND GUIDE THE DOWEL SCREWS INTO THEIR RESPECTIVE HOLES AND ALIGN THE PLEXI PANEL INTO IT'S SLOT. TIGHTEN ALL OF THE CAM LOCKS.




HINT: ROTATE PANELS F AND E TO THEIR OPEN POSITION FOR AN EASIER INSTALL OF LAST SIDE PANEL

9. YOU CAN NOW SET THE STAND UPRIGHT; THIS IS A 2 PERSON JOB,

10. ATTACH YOUR MONITOR TO PANEL J (MONITOR NOT INCLUDED)

11. ATTACH THE MODESTY BLOCKS TO PANEL J.

12. INSTALL PANEL J INTO CABINET- THIS IS A 2 PERSON JOB.

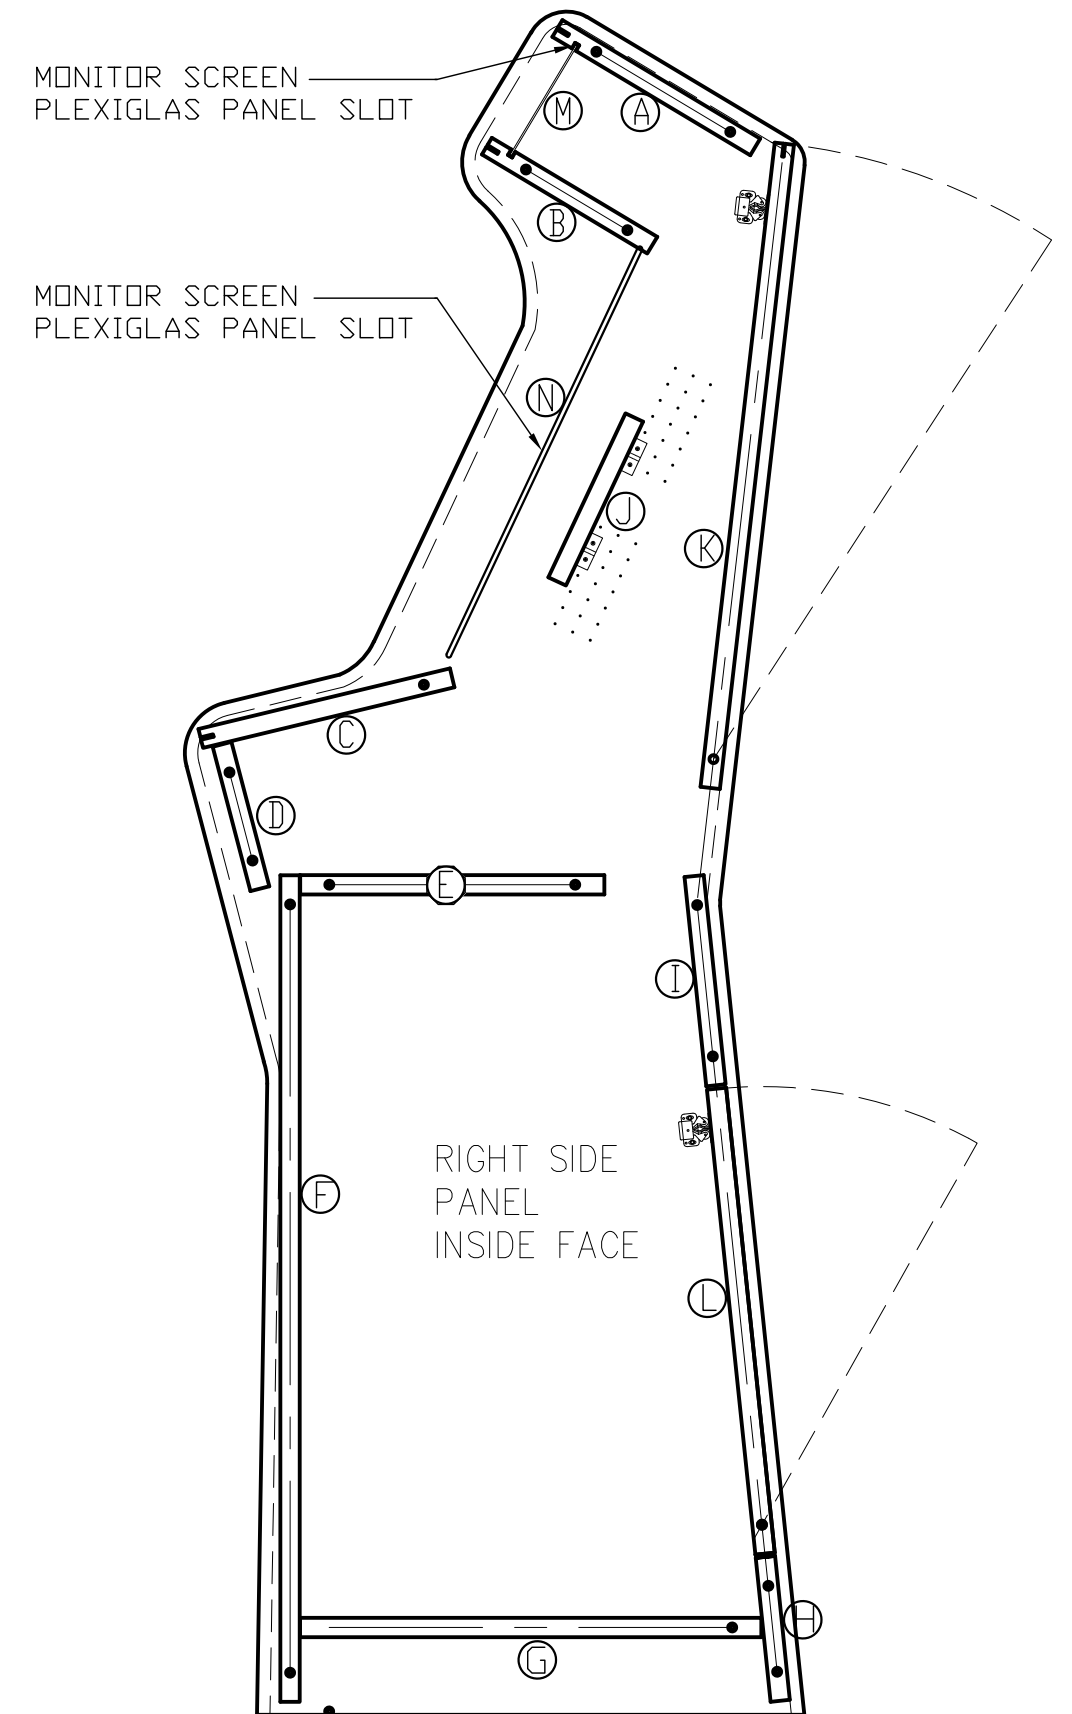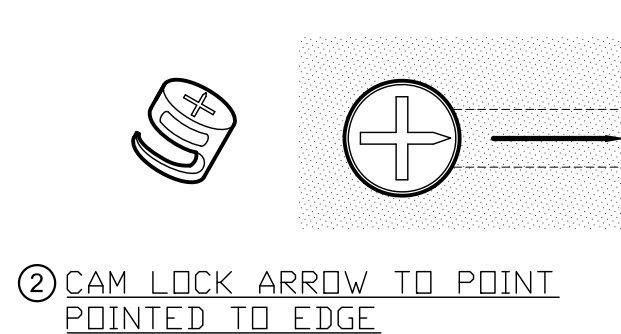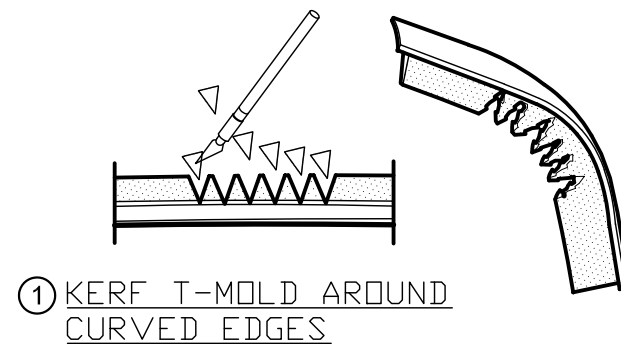

DETAIL A

FOR INSTRUCTIONS WITH INSTALLING THE ELECTRONICS REFER TO:

www.instructables.com/id/2-Player-Stand-Up-Retro-Arcade-by-Micro-Center

SKIP TO STEP 7.

